

# FINISH BORING HEAD OVERVIEW

## INTERMEDIATE DIAMETERS



						
Head Type	EWN	EWE	EWB	EWB-UP	EWN-SD	EWE-SD
Connection Sizes	CKB1-CKB7	CKB4-CKB7	CKB3-CKB7	CKB2-CKB6	CKB3-CKB7	CKB4-CKB6
Overall Boring Range	Ø.787-8.000"	Ø1.614-8.000"	Ø1.260-8.000"	Ø.984-3.937"	Ø1.260"-8.000"	Ø1.614-5.906"
Resolution						
	.0005"/Ø Dial .0001"/Ø Vernier	.00005"/Ø Display	.0005"/Ø Dial .0001"/Ø Vernier	.00005"/Ø Dial	.0005"/Ø Dial .0001"/Ø Vernier	.00005"/Ø Display
Balancing	STATIC*	STATIC*	Automatic	Manual	STATIC*	STATIC*
Insert Holder Included	NO	NO	YES	YES	NO	NO
Back Boring	YES	YES	NO	NO	YES	YES
Accessory Holders	YES	YES	NO**	NO	YES	YES

\* Static balance point of boring head occurs at mid-point of boring range with smallest insert holder attached

\*\*EWB41 & EWB53 do accept EWN-type insert holders (including specials); only balanced with original holder

# BIG KAISER

2600 Huntington Blvd | Hoffman Estates, IL 60192 | P: (224) 770-2999 | F: (224) 770-2997 | bigkaiser@us.bigkaiser.com | www.bigkaiser.com